



Accessories	For Use With:
P.No. 9820 (Boot)	FX0296, FX0296/1, FX0296/S.
P.No. 11327 (Boot)	FX0354, FX0354/S, FX0355, FX0357, FX0359, FX0396, FX0396/1, FX0454, FX0454/S, FX0455, FX0455/S, FX0460.
P.No. 12932 (Boot)	FX0415, FX0415/S, FX0416, FX0416/S, DF0727.
P.No. 12760 (Cover)	FX0267, FX0321.
Max. Working Voltage:	250V a.c.
Flash Tested to:	2kV a.c.
Material:	P.Nos. 9820, 11327, 12932: PVC. P.No. 12760: Polycarbonate.
P.No. 12297 (Adaptor Washer)	Adapts "D" Fixing to anti-rotation Key Fixing. FX0455, FX0455/S, FX0355.
P.No. 12298 (Adaptor Washer)	Adapts anti-rotation Keyed Fixing to double "D" hole Ø16. FX0454, FX0454/S, FX0354, FX0354/S.
Material:	Glass Filled Nylon.